

OTTO[®]

REMOTE

SPEAKER MICROPHONES

The OTTO Remote Speaker Microphone for 2-Way Radio Communications includes

- Speaker
- Microphone
- PTT switch
- 2.5 mm earphone jack
- 2-position volume control
- Optional emergency
- Optional emergency button and appropriate radio connector




INSTALLATION:

1. Turn radio off
2. Remove any dust caps or covers from radio accessory connector
3. Attach speaker microphone to the radio accessory connector
4. Tighten mounting thumbscrew, if required

Antenna version only:

5. Remove antenna from 2-way radio
4. Attach antenna to the connector on top of the speaker microphone

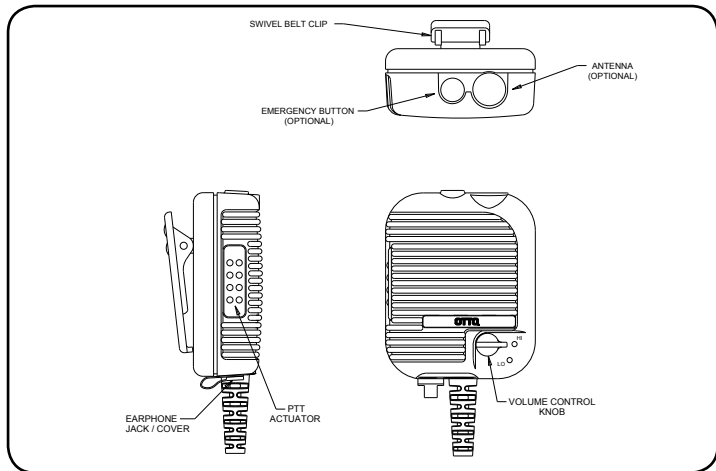

OPERATION:

Turn the radio on and operate it as explained in the operating instructions supplied with the radio. Remember that the receiver audio will be heard only from the accessory speaker.

2-position volume control

- Set the volume control knob to “Hi” or “Lo” position as required

Earphone jack

- Remove the protective cover from the earphone jack
- Insert the audio accessory with 2.5 mm plug into the earphone jack. Audio will be muted in the speaker microphone and routed to the accessory.
- **CAUTION:** to maintain the environmental seal, replace the protective cover when the plug is not in use.

Antenna versions only:

The speaker microphone assembly will perform best when worn above the shoulder.

MAINTENANCE:

If necessary, the external surfaces of the speaker microphone may be cleaned with a mild soap solution and warm water.

Information on Disposal of Old Electrical and Electronic Equipment (applicable for EU countries that have adopted separate waste collection systems).



Products with the symbol (crossed-out wheeled bin) cannot be disposed as household waste.

Old electrical and electronic equipment should be recycled at a facility capable of handling these items and their waste byproducts. Contact your local authority for details in locating a recycle facility nearest to you.

Proper recycling and waste disposal will help conserve resources while still preventing detrimental effects on our health and the environment.



For warranty information, customer service or replacement parts, please contact:

OTTO[®]

2 East Main Street • Carpentersville, IL U.S.A. 60110

Toll Free Phone: 888-234-OTTO (6886)

Phone: 847-428-7171 • Fax: 847-428-1956

E-mail: info@ottoexcellence.com

www.ottoexcellence.com